


SRI 60

protection end cap

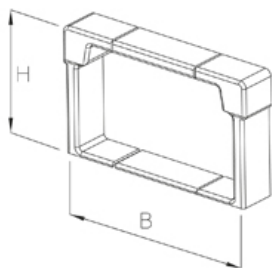

The protective cap is provided with predetermined breaking points for easier separation. For mounting on a filled RI the base is interrupted.

To mount an SRI 60-05, the protective cap must be opened and the middle parts of the protective cap removed. To mount an SRI 60-15, the protective cap must be opened and the SRI-EO 50 must be mounted on the lid and the SRI-EU 50 on the base in between. To mount an SRI 60-20, the protective cap must be opened and two SRI-EO 50 must be mounted on the lid and two SRI-EU 50 on the base in between. To mount an SRI 60-30, the protective cap must be opened and four SRI-EO 50 must be mounted on the lid and four SRI-EU 50 on the base in between.

Polyethylen

Артикул	Product	height	width	weight	incl.
SRI 60-05	60 mm	50 mm	0.01 kg	show all inclusive accessoires	
SRI 60-10	60 mm	100 mm	0.01 kg	show all inclusive accessoires	
SRI 60-15	60 mm	150 mm	0.02 kg	show all inclusive accessoires	
SRI 60-20	60 mm	200 mm	0.02 kg	show all inclusive accessoires	
SRI 60-30	60 mm	300 mm	0.03 kg	show all inclusive accessoires	

Product: Product
height: height
width: width
weight: weight
incl.: incl.

DETAILS / APPLICATIONS

